


SIEMENS

Be inspired



Gigaset
Classic
4010






 


 

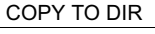
 







 


 

 

 


 






 


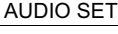









 

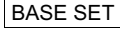
 


 

 
 

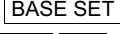
 
 

 

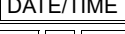
 
 

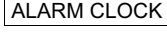
 

Operating instructions

and safety precautions 

General

Quick reference guide

Handset

Activate/deactivate the handset	hold down 
Activate/deactivate the keypad protection	hold down 
Activate/deactivate tones	hold down 
Make an external call	 
Redial a number	 If applicable,  select an entry 
Copy telephone number to the directory	   
Dial with the directory	  [Name] and/or  
Dial with the caller list	    if necessary  
Set the handset volume	       
Make an internal call	 e. g.  or    
Call all handsets	  or   
Transfer call to another handset	 e. g.  
Internal enquiry calls	 e. g.  ; End:   
Set the date	        
Set the time	         
Set the alarm clock	    Enter the alarm call 

Brief overview of the handset

Status LED (li.-em. diode)

- lights up during a call;
flashes at:
- incoming call
 - new messages
 - alarm call

Talk key

- answer a call
- dial a telephone number

Directory key

Open the directory

Key 1

Hold down to select the mailbox

Asterisk key

Hold down to activate/deactivate the ringer

Recall key

- Pause (hold key down!)
- R key function (flash)

Charg. status

Display (display field)

Current display and display keys

see below!

End call key and On/Off key

- end the call
- cancel function
- one menu level back (press briefly)
- Return to idle state (hold down)
- when the telephone is idle on/off (hold down!)

Pound key

Hold down to activate/deactivate keypad protection

Select Services key

Open the network access list

Microphone

Display and display keys

Time

Internal telephone number

Asterisk

The asterisk indicates that the alarm clock is set.

Charging status

☐ battery empty
☐ battery fully charged
flashes: when empty



Display keys:

Press the corresponding keys to initiate the function shown in the display




General

Display symbols

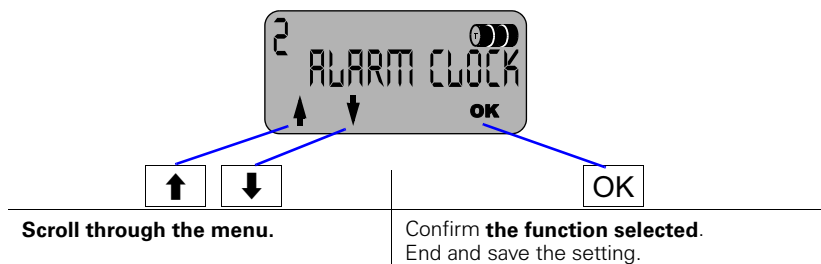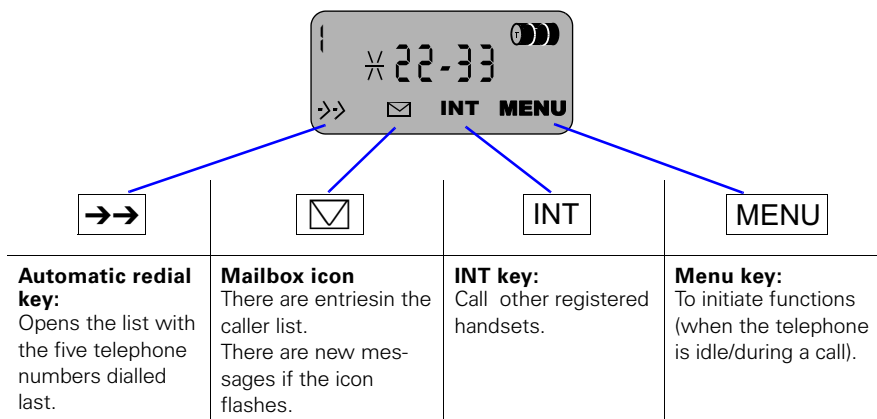

Then:

Press **briefly:** 1 menu level up
hold down : Return to the idle state
No input: Automatically to the idle state

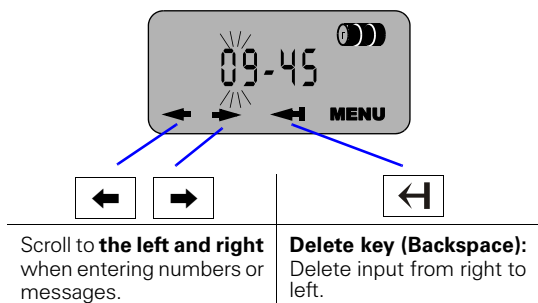

Contents

Quick reference guide	II
Brief overview of the handset	III
Display and display keys	III
Display symbols	IV

Safety precautions 4

Preparing the telephone 5

Installing the base station	5
Operating the handset	7
Attaching the belt clip	8
Activating/deactivating handset	8
Activating/deactivating keypad protection	8

Date and time 9

Setting the date and the time	9
Setting the alarm clock	10

Making calls 11

Making an external call	11
Internal dialling	11
Answering a call	12
Displaying telephone numbers (CLIP)	12
L Muting the microphone	13
Mailbox	13

Enhanced telephone features 14

Automatic redial	14
Directory and network access list	15
Character map	16
Caller list	19

For further information please refer to the index – → page 52!

Making cost-effective calls	22
Network access list (call-by-call)	22
Automatic preselection	24
Registering and de-registering handsets	27
Automatic registration	27
Manual registration	28
De-registering handsets	29
Operating several handsets	30
Changing the name of a handset	30
Changing a handset's internal number	30
Making internal calls	31
Connecting a call	31
Internal enquiry calls	32
Accepting or rejecting a waiting call	32
Joining in a call ("barging in")	33
Deactivating the ringer	34
Individual handset settings	35
Changing a handset's display language	35
Modifying the volume and changing the melody	36
Activating/ deactivating Auto talk	37
Resetting a handset to the factory setting	37
Base station settings	38
Changing the system PIN	38
Modifying volume and melody	39
Repeater support	40
Resetting the base station to the factory setting	40
Connecting the base station to a PABX	41
Dialling mode and flash time	41
Switching temporarily to tone dialling	42
Setting pauses	42

Appendix	43
Maintenance	43
Troubleshooting	43
Guarantee	44
Service:	44
Technical data	46
Menu table	48
Accessories	50
Index	52

Safety precautions

Congratulations



on your Siemens Gigaset!

The following pages describe how your telephone works, so that you will be able to use it easily.

Safety precautions



Only use the power supply unit supplied, identified by the symbol  on the underside of the device.



Only use **approved rechargeable batteries of the same type**.
Never use ordinary (non-rechargeable) batteries. Otherwise health risks and personal injuries cannot be excluded.



Insert rechargeable batteries in accordance with polarity symbols (this instruction is found in the handset's battery compartments).



Use the batteries indicated in these operating instructions (this instructions is found in the handset's battery compartments).



Medical equipment can be affected by the use of the telephone. Observe the conditions in your environment (e.g. doctor's practice).



The handset can cause an unpleasant humming sound in hearing aids.



Do not install the base station in bathrooms or showers.



Do not operate the telephone in environments where there is risk of explosion (e.g. paint shops).



Ensure that the operating instructions are included when passing on your Gigaset to a third party



Dispose of batteries and telephone in an environmentally friendly manner.



Not all functions described in these operating instructions are available in all countries.

Preparing the telephone



The package contains the following:

- one base station,
- one Gigaset 4000 Classic handset,
- one power supply unit,
- one telephone cord,
- one belt clip for the handset,
- two batteries,
- one set of operating instructions.

Installing the base station

Notes on the installation



45° C

5° C

The base station is designed for operation in protected rooms with a temperature range from +5 °C to +45 °C. Install the base station in a central location in the flat/house e. g. in the hall.

Range

The base station range is approx. 300 m outdoors and up to 50 m indoors.

Preparing the telephone


Connecting the base station

for the analogue network:

Power supply unit
(220/230 V) with
mains cable


Telephone jack with telephone cord
(type varies depending on country!)


1

- Insert **the small plug on the mains cable** into  jack,
- place cord in cable duct,
- insert power supply unit into mains socket.

Key to register
additional hand-
sets

2

- Insert **small black plug on the telephone cord** into  jack (clicks into place),
- place cord in cable duct,
- insert telephone jack into tele-
phone socket.

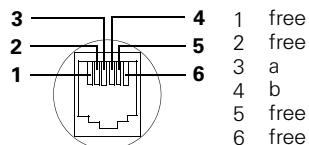

- **Only use the power supply unit supplied** as indicated on the underside of the device.
- If you buy another cord, ensure that it has 3-4 assignment (terminal assignment).



Exercise caution when using a new telephone cord. Only use the cord provided.

Preparing the telephone

Operating the handset

The display is protected by a plastic film.

Remove the protective plastic film!



Inserting the batteries



- Insert the batteries **ensuring correct polarity** – see figure on left.
- Replace cover and push gently **upward** until it clicks into place.
- **To open**, press the grooved area on the cover and slide **back**.



- Only insert the recommended rechargeable **batteries** (see page 46). Never use ordinary (non-rechargeable) batteries or health risks and personal injuries cannot be excluded.
- Never use non-Siemens charging units as these can damage the batteries.



Placing the handset into the base station and charging the batteries

Before activating your handset, place it in the base station with the display facing upward. After approx. one minute, the handset's internal number is displayed (e.g. "INT 1").



For information on how to register **further handsets** (bought additionally), see page 27.



Leave the handset for approx. five hours in the base station to charge the batteries. The charging status icon flashes on the handset indicating that the batteries are being charged:



Batt. empty (symbol flashes)



Batt. 2/3 charged



Batteries 1/3 charged



Batt. fully charged

Note:


Your Gigaset is now ready for operation. Please set date and the time (see page 9), so that the time of incoming calls can be noted correctly.

Preparing the telephone



- Once the initial charging operation is completed you can replace your handset into the base station after each call. Charging is controlled electronically. This ensures optimum charging and prolongs battery life.
- The batteries heat up during charging. This is normal and not dangerous.
- The battery charging status is correctly displayed only after uninterrupted charging/discharging. You should therefore avoid opening the battery compartment unnecessarily.

Attaching the belt clip

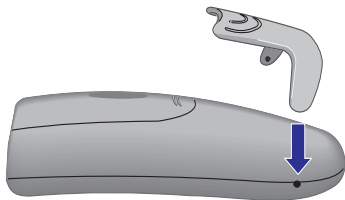

Push the belt clip onto the back of the handset until the side protrusions click into place.

Activating/deactivating handset



To activate/deactivate, **hold down** the end call key – You will hear the confirmation beep*.




The handset is activated as soon as you insert the batteries and place the handset in the base station.

Activating/deactivating keypad protection

You can disable the handset keys when carrying the unit in your pocket or bag. This protects the keypad against inadvertent activation.

If there is an incoming call, the key lock is automatically deactivated and re-activated after the call has ended.

Accepting a call: Press the talk key .



To activate/deactivate, **hold down** key – you will hear the confirmation beep*.

* Confirmation beep = rising tone sequence,
Error beep = falling tone sequence.

Date and time

Press keys:



MENU

↓ BASE SET OK
↓ CLOCK SET OK
↓ DATE SET OK

e. g. 2_{ABC} 0+ 0+ 5_{JKL} 0+ 1_{Q,D}

← →
OK

MENU

↓ BASE SET OK
↓ CLOCK SET OK
↓ DATE/TIME OK

e. g. 1_{Q,D} 9_{WXYZ} 0+ 5_{JKL}

← →
OK

AM OK

or ↓ PM OK

OK

Date and time

Your Gigaset has an alarm clock function to help you keep track of your schedule.

Setting the date and the time

The date and time setting is necessary in order for the date and time of the arrival of messages/incoming calls to be displayed correctly.

You can also set the clock mode, i.e. 12 h mode (**AM** and **PM**) or 24 h mode.

Date

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.
The current setting is displayed in the DD-MM-YY mode.

Enter the day/month/year (e.g. 20.05.2001 as shown).

If necessary, jump to a digit, for example to correct it.

Save the setting and terminate the function.

Time

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.
The current setting is displayed as HH:MM.

Enter the hours/minutes e.g. 19.05 h as shown.

If necessary, jump to a digit, for example to correct it.

Save the setting and terminate the function.

If 12 h mode is set as **CLOCK MODE** :

Confirm first half of the day.

Select second half of the day and confirm.

Save the setting and terminate the function.

Date and time

Press keys:

MENU

↓ BASE SET OK

↓ DATE/TIME OK

↓ CLOCK MODE OK

24 H OK

or

↓ 12 H OK

Display mode (12 or 24 hours)

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm 24 h mode.

Select 12 h mode and confirm.

Setting the alarm clock

You can use your handset like an alarm clock.

Activating the alarm clock

The active alarm clock rings every day at the set time.

MENU

↓ ALARM CLOCK OK

e. g. 0+ 7PORS 1:00 5JKL

← →

OK

Open the menu.


Select the menu item and confirm.

Enter the time for the alarm call (hours/minutes)
e.g. 7.15 h as shown.

If necessary, jump to a digit, e. g. to correct it.

Save the setting and terminate the function.

The asterisk indicates that the alarm clock is set.

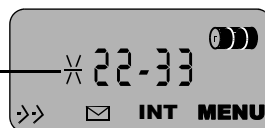

Deactivating the alarm clock

The alarm clock is set, but you do not want the alarm to sound.

MENU

↓ ALARM CLOCK OK

Open the menu.

Select the menu item and confirm.


The alarm call is deactivated. The asterisk before the time display is no longer shown.

Turning off the alarm call

An alarm clock rings and the status LED flashes (approx. 30 s). Press any key to turn off the alarm call.

Making calls

Press keys:

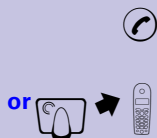


Answering a call

Your telephone rings (ringer) and the status LED flashes.

Press the talk key

Simply remove the handset from the base station (factory setting: Auto talk, see page 37).




- If the **ringer is disturbing you**: Open the menu via **[MENU]** and select **[SILENT]**.
- As long as the call is displayed, you can accept it by pressing the talk key  for example.
- Setting the handset volume (while you are talking, see page 36).

Displaying telephone numbers (CLIP)

The network provider must support the calling line identification (CLIP) and the telephone number must have been transmitted. Contact your network provider.

An incoming call is displayed as follows (example):

Telephone
number

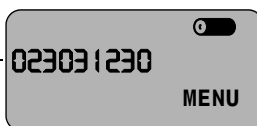

If the number received is saved in the handset directory, the stored name is displayed (example: **[ANNE]**).

If the telephone number or the name is not displayed, you see:

[<< >>]

If you have not requested **CLIP**

[UNAVAILABLE]

If the caller has not requested the telephone number transmission or if display of the number was deliberately suppressed by the caller (**CLIR**)

CLIP	Calling Line Identification Presentation = Displaying the caller's telephone number
CLIR	Calling Line Identification Restriction = display of the incoming telephone number suppressed.

Making calls

Press keys:

INT

MENU

GO BACK

OK

MENU



ANS MACHINE

OK



SET KEY 1

OK

MAILBOX

OK



MAILBOX

OK



PLAYBACK

OK

L Muting the microphone

You can deactivate your microphone during external calls in order to talk confidentially to another person in the room, for example. The external caller cannot hear your conversation during this time. You do not hear your caller either.

Mute the microphone – the call is placed on hold and the external caller will hear music.

Re-activating the microphone:

Open the menu.

Confirm.

You return to the external caller.

Mailbox

Storing the mailbox for fast access

You can use the mailbox for fast access.


Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the telephone number of the mailbox and confirm.



Once you have selected the mailbox, simply hold down the  key on the handset. You are directly connected to the mailbox (fast access).

Checking the mailbox

Prerequisite:

You have entered the number of the mailbox.

Display flashes.

Select the menu item and confirm.

Select the menu item and listen to the message.

Enhanced telephone features

Press keys:

Enhanced telephone features

In addition to standard telephoning, your Gigaset offers a number of other fast, convenient features.



Automatic redial

Your handset automatically saves the five telephone numbers dialled last or names (see page 15).



Display the telephone number/name.



Select the required telephone number/name.



Press the talk key – the telephone number is dialled.

Delete the redialling list



Open the redialling list.

MENU

Open the menu.

6 MNO

DEL ENTRY?

OK

Press digit 6 and confirm the prompt.

Copying the telephone number to the directory



Display the telephone number.



MENU

Select a telephone number and open the menu.



COPY TO DIR

OK

Select the menu item and confirm.



OK

If necessary, change the telephone number and confirm.



If necessary enter the name.


Input of letters and characters (see page 16).

OK


Confirm input.


Enhanced telephone features

Press keys:

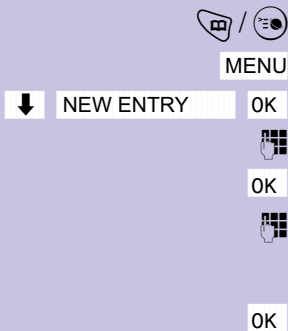

Directory and network access list*

With the **directory**  you can store up to 20 telephone numbers and then dial them at the push of a button.

In order to make calls cost-effectively you can save the prefixes (Call-by-Call) of telephone companies in the **network access list** .

Storing an entry

 /  Open the directory/network access list.

MENU

Open the menu.



NEW ENTRY

OK

Select the menu item and confirm.



Enter the **telephone number**.

OK

Confirm input.



Enter **the name**.

For information on entering letters and characters (max. 12) see the character map.

OK

Confirm input.



Max. number of numbers:

Directory 22 digits


 







 


Network access list 12 digits

* does not work in Ireland

Enhanced telephone features




Press keys:

Character map

	1 x	2 x	3 x	4 x	5 x	6 x
	□	1				
	A	B	C	2		
	D	E	F	3		
	G	H	I	4		
	J	K	L	5		
	M	N	O	6		
	P	Q	R	S	7	
	T	U	V	8		
	W	X	Y	Z	9	
	+	0	-		?	_
	*	/	()	,	
	□					

  Press the relevant key repeatedly or hold it down:



Controlling the cursor with  . Deleting a character with . Characters are always inserted to the left of the cursor.

The entries are sorted in the
following sequence:

1. Blank (□)
2. Digits (0 to 9)
3. Letters (alphabetical)
4. Remaining characters

To avoid the alphabetical sequence of the entries in the directory, enter a blank before the name. This entry then goes to the first position (example: entering "□Karla").

Enhanced telephone features


 
Press keys:

e. g.  




Dialling a number from the directory

Open the directory.

Enter the first letter of the name (e.g. for the name Emma - first letter "E"): Press the  key twice and scroll with the  key. The names are listed in alphabetical order.

Press the talk key. The telephone number is dialled.



After selecting the number, you can also open the menu, select **EDIT ENTRY**, extend/change the number and dial with the talk key .

Dialling with the network access list

You can use this function to put a network provider's prefix in front of the telephone number (linking).



Open the network access list.



MENU

Select Call-by-Call number and open menu.

EDIT ENTRY

OK

Confirm entry.



Enter the number for "linking"

or



OK

Select the telephone number for "linking" and confirm.



Press

Displaying and changing a directory entry



Open the directory.

e. g.  

Enter the first letter of the name.

MENU

Open the menu.



SHOW ENTRY

OK

Select the menu item and confirm. The number is displayed.



If necessary, change telephone number.

For information on entering letters and characters, see page 16.

OK

Confirm input.



Overwrite the name.

OK

Confirm input.

Enhanced telephone features

Press keys:



MENU



SHOW ENTRY

OK



OK



OK



e. g.

3 DEF

3 DEF

MENU



DEL ENTRY

OK



MENU



DEL ENTRY

OK



MENU

6 MND

DEL ENTRY?

OK

Displaying and changing the network provider entry

Open the network access list.

Select a telephone number and open the menu.

Select the menu item and confirm. The number is displayed.

Overwrite number if necessary.

For information on entering letters and characters, see page 16.

Confirm input.

Overwrite the name.

Confirm input.

Deleting a single entry from the directory

Open the directory.

Enter the first letter of the name.

Open the menu.

Select the menu item and confirm.

Deleting a single entry from the network access list

Open the network access list.

Select a telephone number and open the menu.

Select the menu item and confirm.

Deleting all numbers in the directory

Open the directory/network access list.

Open the menu.

Press digit 6 and confirm the prompt.

Enhanced telephone features

Press keys:


Caller list

The numbers of the last 30 calls are saved in the caller list.

Prerequisite: The incoming call number has been transmitted (CLIP).

If several calls are received under the same number, the last call is saved.


Activate the caller list

If there are new calls,  in the display and the status LED flash.



Press the display key of the flashing icon.



Even if there are no new entries, you can open the caller list by pressing .



Open the caller list.

If the status LED does not flash, no new calls or messages have been saved.



CALLS

Select caller list.

The display in the example means:

 Calls

symbolizes caller list.

 02

symbolizes 2 new calls.

 06

symbolizes 6 old calls.



OK

The number received last is displayed.



Scroll to the next or previous entry. One list entry is displayed.



You can delete a phone number from the list via  and .



or

Terminate the function.

Call back a caller



Calling back a caller.

The entry is copied to the redialling list.

Enhanced telephone features

Press keys:

☑
↓ CALLS OK

↓ MENU

↓ COPY TO DIR OK

OK



OK

Copying telephone number to the directory

Open the caller list.

Select the menu item and confirm.

Select the required entry and open menu.

Confirm. Extend the number if necessary.

Confirm input.

Enter the name.

For information on entering letters and characters, see page 16.

Confirm input.



You can also store a telephone number during a call via **MENU** and **COPY TO DIR** ("notebook function").

Caller list settings

Optionally you can choose to save:

- only the **missed calls**
- **all incoming calls.**

☑
↓ CALLS OK

MENU

↓ LIST MODE OK

MISSED OK

or

↓ ALL OK

Open caller list.

Select the menu item and confirm.

Open the menu.

Select the menu item and confirm.

Confirm.

Select the menu item and confirm.

Deleting the caller list

☑
↓ CALLS OK

MENU

↓ DELETE LIST OK

Open the caller list.


Select the menu item and confirm.

Open the menu.

Confirm.

Enhanced telephone features

Press keys:

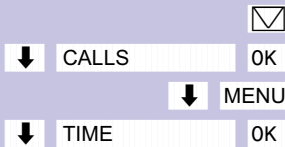

Finding out the date and time of a call

In the caller list you can also display the time the call was received.

Open the caller list.

Select the menu item and confirm.

Select the required entry and open menu.

Select the menu item and confirm.

The display shows for example:

23/12 11-56

In the example, the call was received on the 23.12. at 11.56 h.

If the time is set to the 12 h mode, an **A** behind the time indicates the first half of the day and a **P** indicates the second half of the day.

Finding out the status of a call

In the caller list you can also display whether an entry is new or old or whether the call was answered.

Open the caller list.

Select the menu item and confirm.

Select the required entry and open the menu.

Select the menu item and confirm.

The display shows the following examples:

NEW 02/04

The second of four new calls.

OLD 01/03

The first of three old calls.

ANSWERED

The call has been answered (LIST MODE ALL).

NEW MBX MSG

There is a new message from the network provider in the list.

OLD MBX MSG

The message from the network provider has already been read.

Making cost-effective calls


Press keys:



Making cost-effective calls

To save money you could use the services of the cheapest network providers. You are provided with pre-fixes that you dial before the actual telephone number (call-by-call). This gives you convenient access to low-cost telephone tariffs.

Network access list (call-by-call)

You can save the numbers of telephone companies (call-by-call) in the network access list  (see page 15). Before dialling the telephone number, you can conveniently choose the stored Call-by-Call number.

Dialling with the network access list

You can use this function to put a network provider pre-fix in front of the telephone number (linking).



Activating the network access list.



MENU

Select Call-by-Call number and open menu.

EDIT ENTRY

OK

Confirm entry.



Enter the number for "linking"

or



OK

 

Choose number for "linking" and confirm.



Press.




Enter, change, delete a network provider:

You can manage entries in the network access list in the same way as entries in the directory. Instead of using the phonebook key () , call up the network access list with  and press **MENU** . Then select the required function (see page 17).

Making cost-effective calls

Press keys:

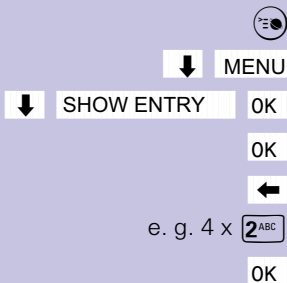

e. g. 4 x **2** **OK**

z. B. **2** **OK**

e. g. **OK**

or

OK

OK

Storing the network provider prefix (call-by-call) for speed dialling

You can store eight numbers (2 – 9) for speed dialling from the network access list. To do so, you must enter the digit for the speed dialling **before** the network provider's name.

Example: **2** and now the network provider's name.

Activate the network access list.

Choose the network provider and open the menu.

Select the menu item and confirm.

Confirm the telephone number.

Move the cursor to the first position of the name.

Enter the speed dial key **2**.

Save the change.



Store a new entry and enter the speed dial number as the first character of the network provider's name.

To use speed dialling:

Hold **down** key: The stored network provider number is displayed.





 


Enter the number for "linking"

Select entry in the directory and confirm.

Press.

Making cost-effective calls

Press keys:

 BASE SET 
 PRESELECT 
 PRESELECT NO 



Automatic preselection

You can store the number of a frequently used network provider (call-by-call). It is automatically put in front of the telephone number dialled ("linking").

You must therefore define lists of telephone numbers to be dialled "**with preselection**" and "**without preselection**".

List with preselection

In this list telephone numbers to be used **with** automatic preselection are stored.

Example:

You enter a "0" in this list. Whenever you dial a telephone number that begins with "0", the stored network provider prefix is used automatically.

List without preselection

In this list telephone numbers **not** to be used with automatic preselection are stored.

Example:

You enter "00" in this list. Whenever a telephone number that begins with "00" is dialled, **automatic** preselection is **not** used.



For information on manual "linking" of a network provider prefix (call-by-call) and a telephone number, see page 22.



Step 1: Storing the network provider prefix

You must first store the prefix of a frequently used network provider (preselection).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

Enter or change the network provider prefix.

Confirm input. Automatic preselection is active.

Making cost-effective calls

Press keys:



Step 2: Saving/changing entries in the preselection lists


Both lists can contain:

Five entries	with up to six digits
Six entries	with up to two digits

Empty entries contain dashes.

List “with preselection”

Open the menu.

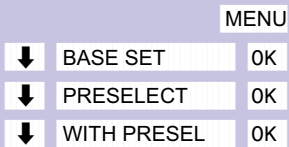

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.



If necessary select the required entry.

MENU


Open the menu.

OK

Enter the telephone number, for example enter **0+** **8^{70V}** and confirm.

List “without preselection”

Open the menu.

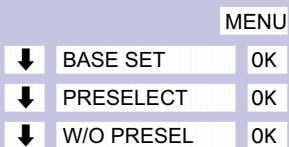

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.



If necessary the select required entry.

MENU

Open the menu.

OK

Enter the telephone number, for example enter **0+** **0+** and confirm.

Making cost-effective calls

Press keys:

Dialling with automatic preselection

When dialling with automatic preselection, the prefixes entered are checked.



Enter the telephone number.



Press the talk key.

The first digits of the dialled telephone number are checked against the list “with preselection.” If these match, the stored network provider prefix is automatically put in front.

Dialling without automatic preselection

When dialling without automatic preselection, the prefixes entered are checked.



Enter the telephone number.



Press the talk key.

The first digits of the dialled telephone number are checked against the list “without preselection.” If these match, the stored network provider prefix is **not** put in front.

Registering and de-registering handsets

Press keys:



Registering and de-registering handsets

To be able to make calls with your handset, you must “introduce” it to its base station (registering). This is very simple and occurs automatically.

Handsets of the Gigaset 2000/3000 families and non-Siemens handsets must be registered manually.


Automatic registration

Gigaset 4000 handsets at the Gigaset 4010 base station



Automatic registration (“introducing”) is only possible for the supplied handset and any other G4000 handsets bought additionally. Before activating your handset, **place it** in the base station **with the display facing upward**. After approx. 1 minute, the handset's internal number is displayed (e.g. “ 1 ”).



Make sure that you do **not** press the On/Off key  before placing the handset in the base station. If you have inadvertently activated the handset, please deactivate it.

The next unassigned internal number (1 – 6) is automatically assigned to the handset. If all numbers are assigned, the internal number 6 is re-assigned. The handset which was registered under number 6 is then deregistered.

It is possible to assign a different internal number (see page 30) or a different internal name (see page 30) to a handset later.

Registering and de-registering handsets

Press keys:



Manual registration

Gigaset 4000 handsets at the Gigaset 4000 base station

If a handset has already been registered at a different base station, you must now register it at your base station. The Gigaset 4000 Classic handset cannot be registered at more than one Gigaset 4010Classic base station at one time.

Step 1:

Open the menu.

Select the menu item and confirm, **PIN ****** is displayed.

Enter the 4-digit system PIN (factory setting: 0000) and confirm.

After entering the system PIN, **REGISTER HS** flashes in the display.

Step 2:

Press the key on the underside of the base station briefly (approx. 5 secs). A signal tone is generated at the base station. The next unassigned internal number (1 – 6) is automatically assigned to the handset.

If all numbers are assigned, the internal number 6 is re-assigned. The handset which was registered under number 6 is then deregistered.

After about a minute the internal number of the handset is shown in the left-hand corner of the display (e.g. "2").

Registering and de-registering handsets

Press keys:

Registering Gigaset 2000/3000 handsets and non-Siemens handsets at the Gigaset 4010 base station

Prerequisite:

The non-Siemens handsets must also comply with the **GAP standard**!

However, it is possible that not all functions will be available on your handset!

GAP	Generic Access Profile = European standard for the interaction of handsets and base stations
------------	---



Step 1:

Register your handset according to the operating instructions of the relevant handset.

After registration, your Siemens base station assigns the **first unassigned** internal number to the handset.



Underside of the base station

Step 2:

Press the key on the underside of the base station briefly

A signal tone is generated at the base station.

De-registering handsets

Prerequisite:

You can only de-register handsets with a Gigaset 4000.

Press the display key.

The list of internal users is displayed.

Select the handset to be de-registered.

Open the menu.

Select the menu item and confirm [PIN ****] is displayed.

Enter the 4-digit system PIN (factory setting: 0000) and confirm.

Confirm the prompt.

INT



MENU

↓ DE-REG H/SET OK

 


OK


DE-REGISTER? OK

Operating several handsets

Press keys:



Operating several handsets

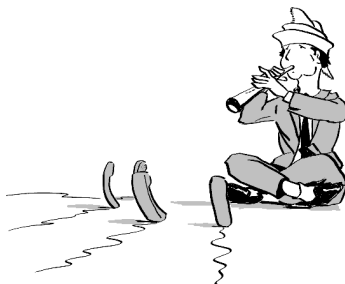

Turn your Gigaset into a small PABX.
You can register and operate up to six handsets at your base station.

Changing the name of a handset

The names 1, 2 etc. are assigned automatically. However, you can change these names, e.g. to "ANNE," "OFFICE" etc. (10 characters maximum).

INT

Press the display key.



Select the required handset.

MENU

Open the menu.



Select the menu item and confirm.



Enter name (see character map on page 16).

OK

Confirm input.

Changing a handset's internal number

You can change the number of a handset.

INT

Press the display key.

MENU

 
Open the menu.



Confirm. All registered handsets are displayed.



Select a handset.





Select a free internal number and confirm.



If the selected internal telephone number has already been assigned to a different handset, you will hear an error beep (descending tone sequence).

Operating several handsets

  Press keys:



Making internal calls

Internal calls are calls to other registered handsets; they are free of charge.

Enter the handset's internal number.

Press.

Select the desired user and press talk key.

Calling all handsets:

All handsets are called ("collective call").

Ending a call:

Press to end the call.

Connecting a call

You can transfer an external call to another handset.


Press the display key – the external user hears music on hold.

Enter the internal number.

When the internal user answers, announce the external call. Then:

Press the end call key. The call is connected.



 
Instead of announcing the call, you can also immediately press the end call key .

If the internal user does not answer or if his line is busy, the call is automatically returned to you.

Operating several handsets

Press keys:

INT

e. g. 

MENU

GO BACK

OK

or



MENU

ACCEPT

OK

or



REJECT

OK

Internal enquiry calls

You are conducting a call with an external user. You can call another internal user and conduct an enquiry call without clearing down the initial connection. You are automatically reconnected to the external user when you end the enquiry call.

Press the display key – the external user hears music on hold.

Enter the internal number of the handset. You are now talking to the second internal user.

Ending the enquiry call:

Open the menu.

Confirm.

You are reconnected to the external user.

The external call is transferred to the second internal user.

Accepting or rejecting a waiting call

You hear the call waiting tone (short beep) if you receive an external call while conducting an internal call. This function must be requested from the network provider.

Open the menu.

Confirm. The internal call is **ended**. You are connected to the external caller.

Select the menu item and confirm.

You are still connected to the internal user.

Operating several handsets

Press keys:

MENU		
↓	BASE SET	OK
↓	ADD FEATURES	OK
↓	BARGE IN	OK

Joining in a call ("barging in")

An internal user conducts an external call. A second internal user can barge in on this call and speak to the other users. This is indicated by a signal tone (not available in all countries!).

Activating/deactivating this function

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

To deactivate, confirm the function marked with ✓ once more with **OK**.

Barging in

You see **LINE IN USE** in the display and want to barge in.



Lift the handset. The conference call is signalled by a beep in the active call.

During the call, you see the display

LISTENING IN.



Replace the handset to leave the call.

Operating several handsets

Press keys:



Hold down the * key until the handset does not ring any more.
The ringer is **permanently** deactivated.
To re-activate the ringer, press .

or

MENU

Open the menu.

SILENT

Press.

The ringer is deactivated **for the current call**.

Paging



Press the base station key briefly – all handsets ring at the same time ("Paging").

End paging:



Press the base station key briefly or press the talk key on a handset.


(not available in all countries!)

Individual handset settings

Press keys:



Individual handset settings

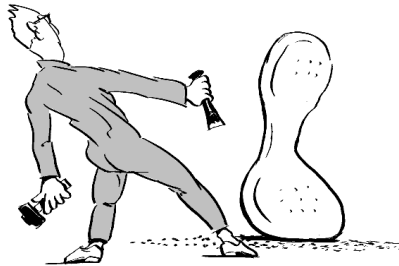

You can set your handset according to your wishes to distinguish it from the standard settings and to obtain optimum convenience.

Changing a handset's display language

MENU

Open the menu.

9 WXYZ **2** ABC

First press 9, then 2 and then:

0+ **1** 00

for German (factory setting),

or **0+** **2** ABC

for English,

or **0+** **3** DEF

for French,

or **0+** **4** GHI

for Italian,

or **0+** **5** JKL

for Spanish,

or **0+** **6** MNO

for Portuguese,

or **0+** **7** PQRS

for Dutch,

or **0+** **8** TUV

for Danish,

or **0+** **9** WXYZ

for Norwegian,

or **1** 00 **0+**

for Swedish,

or **1** 00 **1** 00

for Finnish,

or **1** 00 **2** ABC

for Czech,

or **1** 00 **3** DEF

for Polish,

or **1** 00 **4** GHI

for Turkish.

Individual handset settings

Press keys:

MENU
 ↓ AUDIO SET OK
 H/SET VOL OK
 ↓ OK

MENU
 ↓ AUDIO SET OK
 ↓ RINGER OK
 ↓ OK

MENU
 ↓ AUDIO SET OK
 ↓ MELODY OK
 ↓ OK

Modifying the volume and changing the melody

Handset volume

You can choose from three levels of volume for the handsets – **even during a call**.

Open the menu.

Select the menu item and confirm.

Confirm.

You hear the current volume and its level is displayed. Select the required volume and confirm.

Ringer volume ("ring tone")

You can choose from seven options:

- Five ringer volumes (1 - 5),
- "crescendo" ring (increasing volume; 6),
- No ringer (ringer off; 0).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

You hear the current volume and its level is displayed. Select the required volume and confirm.

Ringer melody

You can choose from ten ringer melodies (1 – 10).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

You hear the current melody and its number is displayed. Set the required melody and confirm.

Individual handset settings

Press keys:

MENU



or



MENU



or



MENU



RESET ?

OK

Activating/deactivating battery low beep

When this function is activated, you are acoustically informed that the battery is almost empty (factory setting).

Open the menu.

Activate the function.

Deactivate the function.

Activating/ deactivating Auto talk

When this function is activated, you can remove the handset from the charging unit without pressing the handset key to accept a call (factory setting).

Open the menu.

Activate the function.

Deactivate the function.

Resetting a handset to the factory setting

The directory, the network access list and the caller list are not deleted when you reset the handset. Registration at the base station is not affected.

Open the menu.

First press 9 and then 3 to activate the procedure

Confirm prompt.

Function	Factory setting
Handset volume (see page 36)	1
Ringer volume ("ring tone," see page 36)	2
Ringer melody (see page 36)	1
Auto talk (see page 37)	on
Battery low beep (see page 37)	on
Display language (see page 36)	english
Alarm clock (see page 9)	off

Base station settings

Press keys:



MENU



BASE SET

OK



SYSTEM PIN

OK



OK



OK



OK

Base station settings

All base station settings are conveniently made via the handset!

Changing the system PIN

To prevent unauthorised registration of a handset, you should change the preset system PIN (factory setting: 0000) to a PIN that only you know.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the currently valid system PIN (4 digits; factory setting: 0000).

For security reasons only four asterisks (****) are displayed.

Confirm. is displayed:

Enter the new system PIN (4 digits).

Confirm. is displayed:

Repeat the new system PIN.

Confirm.

Base station settings

Press keys:

MENU
 ↓ BASE SET OK
 AUDIO SET UP OK
 ↓ RINGER VOL OK
 ↓ OK

Modifying volume and melody

Ringer volume ("ring tone")

You can choose from seven options:

- Five ringer volumes (1 – 5),
- "crescendo" ring (increasing volume; 6),
- No ringer (ringer off; 0).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

You hear the current volume and its level is displayed. Select the required level and confirm.

OFF

Incoming calls are not signalled at the base station but only on the handset.

CRESCENDO

Increasing volume.

Ringer melody

You can choose from ten ringer melodies (0 – 9).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

You hear the current melody and its number is displayed. Select the required melody and confirm.

MENU
 ↓ BASE SET OK
 AUDIO SET UP OK
 ↓ MELODY OK
 ↓ OK

Base station settings

Press keys:

MENU

↓ BASE SET OK

↓ ADD FEATURES OK

↓ REPEATER OK


SURE? OK



MENU

↓ BASE SET OK

↓ BASE RESET OK

 OK

RESET ? OK

Repeater support^{*}

With the Gigaset repeater you can extend the range from your base station to the handset and increase the areas in which reception is possible.

If you want to use a repeater, you must activate this function.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm prompt.

Resetting the base station to the factory setting

Resetting the base station does not affect the system PIN or handset registration.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the system PIN (factory setting: 0000) and confirm.

Confirm prompt.:

Function	Factory setting
Ringer volume (see page 39)	5
Ringer melody (see page 39)	1
Preselection (see page 24)	none
Joining a call (barging in) (see page 33)	off
The handset's name (see page 30)	INT 1 to INT 6
Repeater (see page 40)	off
Pause after R (see page 42)	800 ms
Pause after line seizure (see page 42)	2,0:1
Dialling mode (see page 41)	DTMF
Flash time (at PABXs, see page 41)	250 ms

^{*}. not available in all countries

Connecting the base station to a PABX

Press keys:

Connecting the base station to a PABX

Dialling mode and flash time



Step 1: Changing the dialling mode

It is necessary to change the dialling mode only if your PABX does not operate with the preset tone dialling (DTMF - dual-tone multifrequency). **Please refer to the operating instructions of your PABX.**

Options:

- Tone dialling (DTMF),
- Dial pulsing (DP).

Open the menu.

MENU

↓	BASE SET	OK
↓	ADD FEATURES	OK
	DIAL MODE	OK
↓		OK

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

Select the required dialling mode and confirm.



Step 2: Setting the flash time:

Prerequisite:

Your PABX requires a flash time different to the preset flash time, **Please refer to the operating instructions of your PABX.**

Open the menu.

MENU

↓	BASE SET	OK
↓	ADD FEATURES	OK
↓	TBR	OK
↓		OK

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the flash time and confirm.

80 ms, 100 ms, 120 ms, 180 ms, 250 ms, 300 ms, 600 ms.



The current setting is marked with ✓.

Connecting the base station to a PABX

Press keys:

↓ TEMP TONE OK

Switching temporarily to tone dialling

If your PABX still operates with dial pulsing (DP) but tone dialling (DTMF) is required (e.g. to check the mailbox), you must switch to tone dialling (DTMF) during the call.


Prerequisite: You are conducting a call!

Open the menu.

Select the menu item and confirm.
Tone dialling is active.

Setting pauses

Pause after line seizure

With this function you can set the length of the pause inserted automatically after pressing the talk key  before transmitting the telephone number.

Open the menu.

MENU
8 TUV 9 WXYZ 1 2.5 6 MNO
p. ex. 1 2.5 OK

Initiate the setting.

 
Enter the pause length and confirm.

1 second = **1**; 3 seconds = **2**; 7 seconds = **3**;

2.5 seconds = **4**.

The setting is saved.

Pause after recall key

With this function, you can set the length of the pause that is inserted after holding down the  - key.

Open the menu.

MENU
8 TUV 9 WXYZ 1 2.5 2 ABC
p. ex. 1 2.5 OK

Initiate the setting.

Enter the pause length and confirm.

None = **1**; 800 ms = **2**; 1600 ms = **3**;

3200 ms = **4**

The setting is saved.



Appendix

Maintenance

Simply wipe the base station and handset with a **damp cloth** or an antistatic wipe. **Never** use a dry cloth as this can cause static discharge!

Troubleshooting

If your telephone does not behave the way you want it to, first try to solve the problem using the following list.

Fault	Possible cause	Solution
No display.	Handset not activated Batteries empty	Hold down the end call key  for 1 second Charge or replace the batteries (see page 7).
No reaction to key-stroke.	Keypad protection activated	Hold down the  key for 1 second
No radio connection to the base station – all displays flashing.	Handset outside the base station range. Handset not registered Base station not activated	Move closer to the base station. Register the handset (see page 27). Check the connector at the base station (see page 6).
Handset that is in the base station is not charging.	Line seized by a second handset for a long period.	Maximum charging power is only possible while nobody is making calls.
Handset/base station does not ring.	Ringer off	Activate the ringer (see page 36/page 40).
Your caller on the telephone cannot hear you.	The [INT] key was pressed – the microphone is “muted.”	Press [GO BACK] [OK] to re-activate the microphone.
The incoming call number is not displayed although CLIP is set.	The telephone number transmission is blocked.	Callers must permit the transmission of their telephone numbers at their network providers.

Appendix

Fault	Possible cause	Solution
The ringer/dialling tone cannot be heard.	You have changed the telephone cord on your Gigaset.	Ensure, when purchasing a new cord, that it has the correct pin assignment (3-4 assignment of the telephone leads/ EURO CTR37).
Error beep is generated (descending tone sequence)	Wrong input	Repeat the procedure; note the display and, if necessary, refer to the operating instructions.

Guarantee

Over the guarantee period from the date of purchase from the stockist, Siemens AG will rectify all material or manufacturing defects by repairing or replacing the defective device.

As of 01.01.2002, the European guarantee period will be 12 months.

The guarantee does not cover damage caused by improper use, wear and tear or third party access. The guarantee shall not cover consumables or defects which only slightly decrease the value or serviceability of the device.

Service:

www.siemens.com/troubleshooting

Abu Dhabi:	Siemens hotline	02 6423800
Egypt	Siemens hotline	01 33 13 144
Ivory Coast	Siemens hotline	80 000 333
Kuwait	NGEEO	481 87 49
Morocco	Setel S.A.	22 669232
Oman	Siemens hotline	79 10 12
Pakistan	Siemens hotline	02 15 67 35 65
Republic of South Africa	Siemens hotline	08 60 10 11 57
Saudi Arabien	Siemens hotline	02 6515094
Tunisia	Siemens hotline	01 86 19 02



Siemens Service should be contacted if problems arise with the unit. Your specialist dealer will be happy to answer any questions on unit operation. Contact your network provider for questions concerning telephone connections.

Your Gigaset is intended for operation in your country, as depicted on the underside of the base station. Country-specific features have been taken into account.

The conformity of the device with the essential requirements of the R&TTE directive is confirmed by the CE symbol.

Excerpt from the original declaration:

„We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH with the registration number „Q810820M“ in compliance with ANNEX V of the R&TTE-Directive 99/05/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/05/EC is ensured.“

Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. If necessary, a copy of the original DoC can be made available via the company hotline.

CE 0682

Appendix

Technical data

Recommended batteries

Nickel-cadmium (NiCd)	Nickel-metal-hydride (NiMH)
Sanyo N-3U (700 mAh)	Current VHAAH 1300 (1300 mAh)
Mobile Power 700 (700 mAh)	YDT 1200 (1200 mAh)
Panasonic P-60AA DT (600 mAh)	Panasonic HHR-110 AA (1100 mAh)
Emmerich 700 (700 mAh)	Sanyo HR-3U (1600 mAh)
	GP GP130 AA HC (1300 mAh)
	Emmerich1300 (1300 mAh)

The handset's operating times/charging time

Capacity (mAh)	Standby time (hours)	Talktime (hours)	Charging time (hours)
700	up to 200 (8 days)	more than 10	approx. 5.5
1200	up to 320 (13 days)	more than 17	approx. 9
1600	up to 400 (18 days)	more than 23	approx. 12



We recommend initially charging the batteries for at least 16 hours without interruption – irrespective of the charging status icon!

The battery charge capacity decreases after a few years for technical reasons.

Power consumption

- In standby mode (without charging) approx. 1,6 Watt.
- In standby mode during charging approx. 4,6 Watt.
- During a telephone call (without being charged) approx. 3.2 Watt.

Appendix

Feature	Value
DECT-Standard	is supported
GAP standard	is supported
No. of channels	Base station: 120 duplex channels Handset: 60 duplex channels
Radio frequencyrange	1880 - 1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Power supply	Base station 220/230 V ~/ 50 Hz (power supply unit SNG X-a)
Base station power consumption	standby approx. 3 Watt when calling approx. 5 Watt
Environmental conditions for operation	+5 °C to +45 °C 20 % to 75 % relative humidity
Dialling mode	DTMF (tone dialling)/DP (dial pulsing)
Flash time	Flash: 250 ms
Dimensions Base station	136.6 x 149 x 64.2 mm (L x W x H)
Dimensions Handset	155.5 x 53.6 x 36.2 mm (L x W x H)
Weight	Base station 215 g Handset with batteries < 160 g
Length of the cords	Telephone connecting cord approx. 3 m Mains cable approx. 3 m

Menu table

Menu table

It is faster to select a menu function by pressing **[MENU]** than selecting the digit combinations by scrolling, e.g. **[5^{HL}] [2^{ARC}] [2^{ARC}] = 5-2-2** to set the time.



Main menu

[MENU] when the telephone **is idle**, press:

2	ALARM CLOCK	Enter alarm call				
3	AUDIO SET	3-1	H/SET VOL	set		
		3-2	RINGER	set		
		3-3	MELODY	set		
5	BASE SET	5-1	AUDIO SET UP	5-1-1	SPEAKER VOL	set (G4015 only)
				5-1-2	RINGER VOL	set
				5-1-3	MELODY	set
		5-2	CLOCK SET	5-2-1	DATE SET	
				5-2-2	DATE/TIME	
				5-2-3	CLOCK MODE	5-2-3-1 24 H
						5-2-3-2 12 H
		5-3	SYSTEM PIN	enter		
		5-4	BASE RESET	factory setting		
		5-5	ADD FEATURES	5-5-1	DIAL MODE	5-5-1-1 TONE
						5-5-1-2 PULSE
						5-5-1-3 DTMF-EARTH (country-specific)
				5-5-2	TBR	5-5-2-1 80 MS
						Until
						5-5-2-7 600 MS
				5-5-3	REPEATER	on/off
				5-5-6	BARGE IN	on/off
		5-6	PRESELECT	5-6-1	PRESELECT NO	Prefix/network provider
				5-6-2	WITH PRESEL	List
				5-6-3	W/O PRESEL	List
7	REGISTER HS					

Menu table


Directory/network access list

Press  /  to open the corresponding list.

The following **MENU** functions are now available:

1	EDIT ENTRY	Add number
2	NEW ENTRY	Save new telephone number
3	SHOW ENTRY	Display/change telephone number
4	DEL ENTRY	Delete entry

Messages


Press  to open the list with the messages.

The following **MENU** functions are now available:

1	ANS M	(if available)		
2	MAILBOX			
3	CALLS	3-1	DELETE	Delete entry
		3-2	COPY TO DIR	Copy no. to the directory
		3-3	TIME	Display date/time
		3-4	STATUS	Indicate new/old
		3-5	LIST MODE	3-4-1 MISSED
				3-4-2 ALL
		3-6	DELETE LIST	

Accessories

Accessories

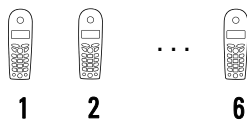

Upgrade your Gigaset to a cordless PABX:

- Everyone has their own handset
- Toll-free internal communication
- Transferring external calls to the right person etc.

Gigaset 4000 Classic handset

The Gigaset 4000 Classic offers you the following features:

- 12-digit display to show the time, telephone numbers etc.
- Directory with 20 entries
- Alarm clock
- Automatic redialling of the last 5 numbers



The package includes: Handset with charging unit

Colour: midnight blue or glacier green

Gigaset 4000 Comfort handset

The Gigaset 4000 Comfort offers you enhanced options.

- 5 line illuminated graphic display
- Walkie-Talkie
- Handsfree talking
- Directory for approx. 200 telephone numbers/names
- Room monitoring
- Reminder function
- Full ISDN functionality in connection with an ISDN base station.



The package includes: Handset with charging unit.

Colour: midnight blue or glacier green.*

* Depending on the country

Accessories



Gigaset repeater

With the Gigaset repeater you can extend your Gigaset's range and open up areas in which reception was not possible.

All functions of the handset can be used in the extended transmission area **(not available in all countries!)**.

All **devices, accessories** and **batteries** are available in **specialised shops**.

Index

Index

A

Accessories **50**

Activating

handset **8**

keypad protection **8**

Alarm call **10**

Alarm clock **10**

activating **10**

deactivating **10**

Auto talk

activating/deactivating **37**

Automatic preselection **24**

Automatic redial **14**

B

Barging in (joining a call) **33**

Base station

connecting **6**

connecting to a PABX **41**

installing **5**

resetting to the factory setting **40**

setting pauses **42**

setting the ringer volume **39**

Batteries

inserting **7**

loading **7**

recommended **46**

Battery low beep **37**

Belt clip **8**

Brief overview **III**

C

Call

connecting **31**

ending **11**

Call waiting **32**

Callback a caller **19**

Call-by-Call **22**

Caller list **19**

Changing the display language **35**

Changing the system PIN **38**

Character map **16**

Charging status icon **7**

CLIP

caller list **19**

displaying numbers **12**

Collective call (making internal calls) **31**

Confirmation beep **8**

Connecting a call **31**

D

Date setting **9**

Deactivating

battery low beep **37**

handset **8**

keypad protection **8**

ringer **34**

Delivery package **5**

De-registering handsets **29**

Dialling modes **24, 28, 29, 41**

Dialling with automatic preselection **26**

Directory **15**

deleting a single entry **18**

deleting all entries **18**

dialling a number **17**

storing an entry **15**

Display keys **III**

Displaying telephone numbers (CLIP) **12**

DP (Dial pulsing) **41**

DTMF (dual-tone multifrequency) **41**

E

Enquiry call (internal) **32**

Error beep **8**

F

Factory setting

base station **40**

handset **37**

Flash time **41**

G

GAP standard **29**

Guarantee **44**

H

Handset

- activating/deactivating **8**
- all handsets ring ("Paging") **34**
- automatic registration **27**
- de-registering **29**
- name of a handset **30**
- operating **7**
- operating times/charging time **46**
- power consumption **46**
- registration **27**
- resetting to the factory setting **37**

Handset volume **36****I**

- Internal dialling **11**
- Internal enquiry calls **32**
- Internal number **30**

K

- Keypad protection **8**
- Keys **III**

M

- Mailbox **13**
- Maintenance **43**
- Making an external call **11**
- Making calls
 - answering a call **12**
 - external call **11**
 - internal dialling **11, 31**
- Medical equipment **4**
- Muting the microphone **13**

N

- Name of a handset **30**
- Network access list **17, 22**
 - deleting a single entry **18**
- Network access list (call-by-call)
 - displaying and changing an entry **17, 18**
 - entering a name **17**
 - storing an entry **15**
- Network provider **22, 23**

Notebook function **20****O**

- Operating times of the handset **46**
- Operation see preparing the telephone **5**

P

- PABX **41**
 - switching to tone dialling **42**
- Paging **34**
- Pause **11**
- Power consumption **46**
- Power supply unit **4**
- Preparing the telephone **5**
- Preselection **24**
 - list with preselection **24**
 - list without preselection **24**
- Preselection, automatic **24**
- Protective plastic film **7**

R

- Range **5**
- Redialling list **14**
- Registering handsets **27**
- Repeater **40**
- Ring tone
 - base station setting **39**
 - handset setting **36**
- Ringer melody (base station) **39**
- Ringer melody (handset) **36**
- Ringer volume (base station) **39**
- Ringer volume (handset) **36**

S

- Safety precautions **4**
- Service **44**
- Setting the language
 - display **35**
- Settings **35**
 - display language **35**
- Speed dialling **23**
- Symbols **IV**

Index

T

Technical Data **46**

Telephone number **15**

 copying to the directory **20**

 redialling list **14**


Time setting **9**

Tone dialling **42**


Troubleshooting **43**

Operating the telephone


1

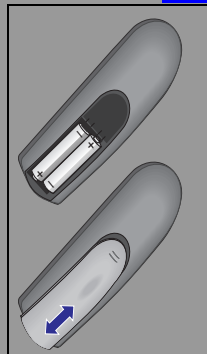

3

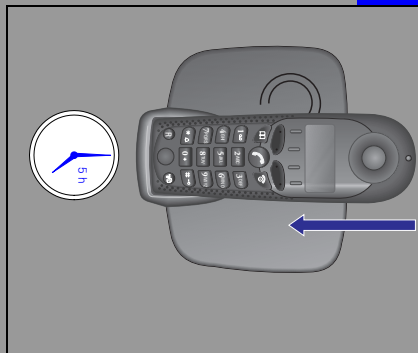

2

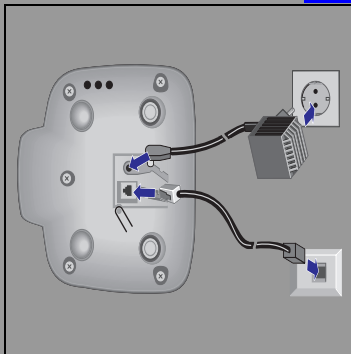

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 München

© Siemens AG 2001
All rights reserved. Subject to availability.
Right of modification reserved.
Printed in Germany (07/2001).

Siemens AG
<http://www.my-siemens.com>

Reference No.: A31008-G4010-J101-1-7619